



User Manual for CLAMP 20

Assembly of the nut and knob is required before use (See Figure 1)

- 1) Never exceed the safe working load (SWL) shown on side of clamp.
- 2) Only use the clamp within its designed tube parameters (48mm-51mm)
- 3) The SWL is only applicable when the clamp is used in vertical orientation i.e. on a horizontal tube (See Figure 2).
- 4) All clamps should be visibly inspected before use. In the event of any damage, including cracks the clamp should be taken out of service and returned for inspection.
- 5) **When used in conjunction with any other accessories, care must be taken to ensure the minimum SWL of any component is not exceeded.**