



G002GSS



Artificial Snow Effects Machine
with Wired & Wireless Remote Control and
Built-in LED Light Show

IMPORTANT

Installer and Users please note:

These instructions should be read carefully and left with the user of the product for future reference.

BEFORE USE

You must inspect the product including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact your supplier immediately.

PRODUCT SAFETY

- This appliance can be used by children aged 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision and instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not place on carpet or other soft surfaces.
- Do not operate the machine if people or animals are within 2m of the output nozzle.
- Do not point the output towards naked flames or other incandescent material.
- Do not point the output towards sensitive electronic equipment.
- Do not put anything apart from Snow fluid in the tank (except when cleaning as described on page 3).
- Do not move the unit whilst it is operating. Disconnect from the mains supply before moving.
- For indoor use only.
- Do not use in bathrooms, wet or damp locations.
- Do not place the mains lead beneath a carpet or rug.
- Do not allow the cable to hang over the edge of a table.
- Arrange the cable so that it cannot cause a trip hazard.
- Never leave the product unattended when plugged in.

NOTES

- 1) Artificial snow is produced using dermatologically safe chemical additives in a water based solution. The 'snow' produced should not cause any irritation or adverse effects but if found to do so discontinue the use and refer to the COSHH sheet for the snow fluid used for care and treatment.
- 2) Keep any snow or fluid away from the eyes, nose and mouth, contact should be treated in accordance with the COSHH sheet for the fluid.
- 3) Artificial snow may cause discolouration or staining of delicate materials and finishes. If the unit is to be used in a situation where the snow could come into contact with such materials then it is recommended that a small area of the item is tested with the snow fluid for suitability.

GENERAL SAFETY REQUIREMENTS

Domestic wiring must be tested periodically by a qualified electrician at least once every 10 years or at every change of occupancy.

For office and retail premises, and buildings such as village halls, the wiring must be inspected at least once every 5 years.

We recommend that this unit should be Portable Appliance Tested (PAT) yearly by suitably trained personnel.

It is recommended that all building be fitted with smoke alarms (it is mandatory for new buildings). Ionisation-type smoke alarms are recommended for buildings where theatrical fog effects are to be used.

OPERATION

Place the G002GSS on a firm flat surface. Ensure that the snow outlet cone (at the front) is not obstructed and is free to move.

To fill the tank:

The unit should be disconnected from the mains supply.

- Unscrew the lid, and fill with Snow Fluid
- Replace the lid
- Push the filter tube to the bottom of the tank.
- Plug the mains lead into a 13 Amp mains socket.
- If connecting via an extension lead, make sure that the lead is rated at 13 Amps or more, and that it is fully unwound.

Turn the machine on via the switch on the rear. The switch will illuminate red. The red LED on the controller will also illuminate. Depress the red button on the wired controller, a green LED will illuminate on the controller. Turn the knob on the controller to control the speed of the fan. The snow machine will continue to produce 'snow' until switched off via the remote. If the unit runs out of fluid turn off the machine at the remote switch immediately. Running the machine with no fluid risks damaging or seizing the pump and will invalidate any warranty.

This unit is also supplied with a wireless remote control which operates in place of the red button on the wired remote. To use first set the desired fan speed using the knob on the wired remote control then ensure the red button is in the off position. Press the on button on the remote to operate. The fan and pump will then operate. To switch off press the OFF button.

The unit is supplied with 2 decorative Led's which add to the snow effect. The LED's will turn on when the pump is set above a set level and the unit is switched on.

MAINTENANCE

Clean the outside of the unit with a soft damp cloth, with a drop of washing up liquid.


To clean the machine internally:

- Remove the lid from the tank
- Empty out any excess fluid
- Rinse the tank with a 20% solution of white vinegar and distilled water. This will remove any lime deposits and kill bacteria.

After forty hours' of use, and before long-term storage clean the tank with the vinegar solution and then operate the machine with just distilled water (no vinegar) to remove any snow fluid from the pump and tubes.

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre. If the mains plug needs to be replaced, proceed as follows:

- Connect the brown wire to the terminal labelled "L".
- Connect the blue wire to the terminal labelled "N".
- Connect the green-yellow wire to the terminal labelled with the earth symbol.
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and is fully tightened.

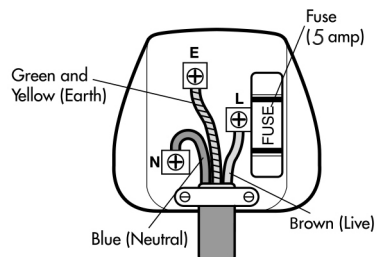

FAULT-FINDING

Snow not produced:

- Check that the power indicator switch is illuminated. If not, check that the mains plug is fully inserted into the mains socket and that the mains socket is functional and the switch is turned on.
- Check that there is fluid in the tank.

Pump is excessively noisy:

- Check that there is fluid in the tank.
- If this does not solve the problem, clean the appliance as described in the “Maintenance” section.

PAT TESTING

When used in a workplace, this product must be safety-tested yearly by a qualified electrician (PAT Tested) in order to comply with the Electricity at Work Regulations.

If hired out, it must be PAT tested prior to each hire.

We recommend that it is PAT tested regularly when used in a domestic environment.

DISPOSAL AND RECYCLING

You must not dispose of this appliance with domestic household waste. Most local authorities have specific collection system for appliances and disposal is free of charge to the end-user.

When replacing an existing appliance with a similar new appliance your retailer may take the old appliance for disposal.

TECHNICAL SPECIFICATION

Dimensions.....	330x188x175mm
Weight	1.8kg
Power Supply	220-240V~
Power Consumption.....	420W
Operating Current.....	1.82A
Tank Capacity.....	0.55l

SERVICE WARRANTY

Electrovision guarantees the product free from defects in materials and workmanship for a period of one year.

Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit , then the warranty will be rendered void.

The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights.

If you have any problems with this product, please call our Help Desk on (0845) 459 4816. The help desk is open from 8 am until 1 pm.

Electrovision Ltd.,
Lancots Lane,
Sutton Oak,
St. Helens,
Merseyside.
WA9 3EX

website: www.electrovision.co.uk